NEXO FLASH®

PREMIUM MEMBRANE FLASHING

INSTALLATION PROCEDURES

This NEXO FLASH® Membrane Flashing installation guide is intended for use when a weather-resistant barrier, such as house wrap, will be installed after the window is installed. The head, sill, and jamb flashing should be applied over the face of the window's mounting flange, as described in Method A of ASTM E2112 and AAMA 2400-02. Other installation methods may also be used. In all cases, installers should follow the window manufacturer's instructions, local building codes, and accepted best practices for window and door installation.

Prior to the installation process, the NEXO FLASH® Membrane flashing materials can be pre-cut using the rough opening (RO) dimensions. Surfaces should be clean and free of debris and dust. Install on a dry surface clear of any ice or snow. Cover within a 6-month time frame.

STEP 1
SILL INSTALLATION

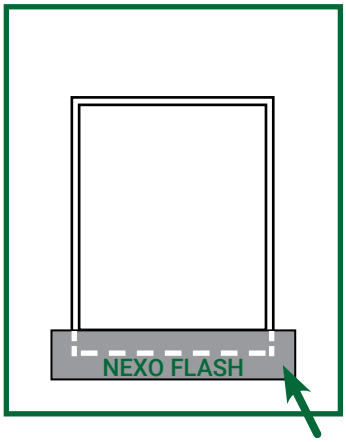

Cut the NEXO FLASH® Membrane flashing to the width of the window opening plus 12 inches, allowing it to extend 6 inches beyond each side of the rough opening. Peel back half of the release paper from the back of the flashing to make installation easier. Apply the flashing to the exterior side of the window opening, adhering it to the rough opening. Leave the lower half of the sill flashing backing in place so the house wrap can tuck underneath for proper water drainage. The membrane flashing should be flush with the edge of the sill.

STEP 2
INSTALL WINDOW

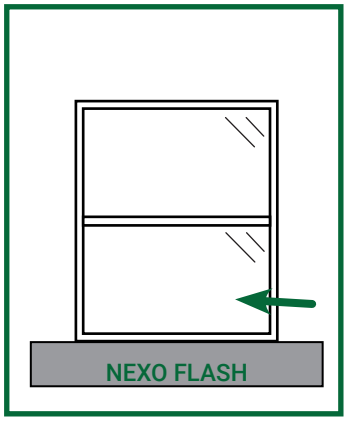

Install the window according to the manufacturer's instructions. Apply a 3/8-inch bead of NEXO FLEX® MS1000 sealant to all four sides on the back of the window fin, then set the window in place. If sealant is used, remove any excess from the nailing flange and surrounding area to create a smooth, continuous substrate.

STEP 3
SIDE JAMB FLASHING

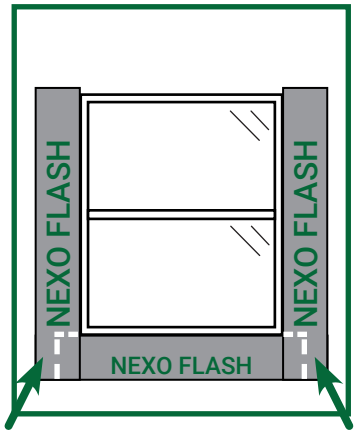

Cut the NEXO FLASH® Membrane flashing to the height of each side jamb opening plus 12 inches, allowing it to extend 6 inches beyond the top and bottom edges of the rough opening. Peel back the release paper from the back of the flashing to make installation easier. After the window is installed, apply the pre-cut flashing over the nailing flange, extending it over the sill flashing to support proper drainage. Roll the flashing as needed to ensure a tight adhesive bond. Repeat on both sides of the window.

STEP 4
HEAD FLASHING

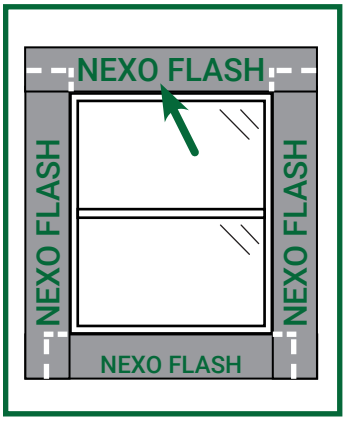

Peel the release liner from the back of the pre-cut NEXO FLASH® Membrane head flashing to expose the adhesive. Apply the flashing over the top window nailing flange, extending it 6 inches beyond each side of the window opening. Install the head flashing over the side flashings, then roll it firmly as needed to create a secure bond and seal against moisture intrusion.

CALIBER SUPPLY

Caliber Supply, LLC
Phone (480) 336-8342
orders@caliber-supply.com

P.O. Box 22041
Mesa, AZ 85277
Caliber-Supply.com

© 2017-2026 Caliber Supply, LLC